

TicChop



The optional chopper box TicChop is designed for direct modulation of the bias voltage of a Toptica photo-emitter.

Rating: Not Rated Yet

[Request a quote about this product](#)

Description

The optional chopper box TicChop is designed for direct modulation of the bias voltage of a Toptica photo-emitter. Connect the input of the chopper box to the camera's chopper port with the included chopper cable. Use a regular SMA cable to connect the SMA output connector to the photo-emitter bias port. Ensure that the voltage levels of the chopper box (on at -1.5V and off at +0.5V) are compatible with the specifications of the photo-emitter to ensure proper functionality and to avoid any damage. See the wiring diagram in the appendix.

Specifications are subject to change without prior notice.

Reviews

There are yet no reviews for this product.

///